



Steelware, Inc.

PO Box 15179 • Greenville, SC 29610

Phone (864) 294-1206

Fax (864) 246-9207

Modules included in Steelware Version 5

Wide Flange Beams
Channel Beams
Tube Beams
Slope Wide Flange Beams
Slope Channel Beams
Trusses
Clip End Connections
Single Clips (NS or FS)
Bent Plate Clip Connections
Bolted Clip End Connections
Butt Plate End Connections
End Holes
OSHA Safety Connections
Web Holes
Web Holes Continuous Spaces with Reference
Dimensions
Skewed Plate Connections
Shear Tabs
Moment Connections
Pour Stops
Nailer Holes for Beam Flanges
OSHA Top and Bottom Clips
Wide Flange Columns
Tube Columns
Pipe Columns
Base Plates
Cap Plates
Column Shear Tabs
OSHA Joist Girder Tabs
Column Stiffener Plates
Column Splices
Leveling Plate
Bracing Calculator
Oblique Bracing Calculator
Angle Bracing
Tube Bracing
WT Bracing
Horizontal Bracing Plates
Gusset Plates
Gusset Plates w/ Clip Connections @ T & B of Beams
Stair Stringers (Concrete Pan Fill, Grating, and
Checkered Plate)
Stair Back Channel Support Angles
Landing Pans
Stair Rails
Stair Picket Rails
Stair Wall Rails
Level Rails
Level Picket Rails
Ramp Rails
Embed Angles
Checkered Plate Embed Angles
Grating Embed Angles
Standard Connections (including Angles, and Column
Base Plates)
Erection Plan Modules
Erection Elevation Bracing
Steel Sections for Plans and Sections
Roof Frames
Anchor Bolts
Hanger / Sag Rods
Bollards
Dock Frames
Cage Ladders
Plain Ladders
Angle Frames
Bolted Shelf Angles
Erection Stair Plans
Stair Elevation Builder
Field Bolts
Title Block Program
Custom Title Block Editor
Shop Bill Program
Auto Bill of Material for All Modules
Job Information File
Defaults
Custom Title Blocks
Custom Bills of Material
Anchor Bolt Setting Details
Beams with Automatic End Connections
Thru Shear Plates for Tube & Pipe Columns
Spaces Calculator
NS & FS Stiffener Plates
Option to Draw Stringers & Rails to Scale
Embedded Bearing Plates

www.steelware.com